

# **INSTALLATION INSTRUCTIONS**

## **LOCATION**

1. All models, allow a minimum of 100mm above or beside and behind for correct ventilation. Best performance will be achieved between 10° & 32° Celsius
2. Machine must be LEVEL
3. Incoming water temperature affects ice production. Therefore, avoid above ground plumbing and pipes exposed to direct sunlight

## **START-UP PROCEDURE**

1. FIT ADJUSTABLE LEGS AND ENSURE MACHINE IS LEVEL
2. Connect drain hose to machine and ensure there are no kinks and it has a fall to the external drain.
3. Connect water hose to machine and tap and turn on water.
4. Connect power cord to supply and switch on power.
5. The machine will start in the harvest cycle on initial installation and fill the water trough. If the machine does not start in harvest cycle lift the bottom front panel and remove it. Turn the orange timer (see fig.1) clockwise with a screw driver until it goes into harvest and refit the front panel.