

ADJUSTMENTS

There are only two adjustments which can be made to the machine, ice size and bin capacity. The machine should be allowed to complete two (2) cycles before making any adjustments.

ICE SIZE

DO NOT ADJUST DURING HARVEST CYCLE

Ice size has been factory set but can be adjusted between approximately 10g and 32g

To adjust the ice size lift the bottom front panel and remove it.

This gives access to the ice adjustment screw (see fig. 1)

Using a screwdriver, turn clockwise to increase and anticlockwise to decrease ice size. It is best to make only small adjustments until desired size is achieved.

Replace front panel after adjustment

BIN CAPACITY

The machine will automatically stop when the temperature in the storage bin reaches the preset level, therefore the height (amount) of ice in the bin will vary from winter to summer. To maintain the optimum level the bin thermostat (see fig.1) needs to be adjusted.

To adjust the ice level lift the bottom front panel and remove it.

This gives access to the bin thermostat adjustment screw (see fig. 1)

Using a screwdriver, turn clockwise for winter and anticlockwise for summer. It is best to make only small adjustments until desired level is achieved.

Replace front panel after adjustment

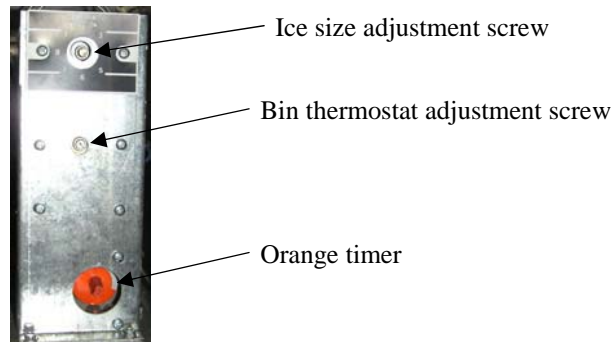


Fig 1