


CIRCUIT BOARD LIGHTS

- LO Float Light, on when the water level is ABOVE the LOW level, light switches off when the water has fallen to the correct LOW level
- HI Float Light, on when the water level has reached the correct HIGH level
- Flap number 1 Light on when flap is closed
- Flap number 2 Light on when flap is closed
- Compressor Light is on when the main compressor relay is activated
- Freeze Light is on when the freeze cycle is operating i.e. HOT GAS Solenoid is off and the water pump is on
- Fill Light is on when the water fill solenoid is on

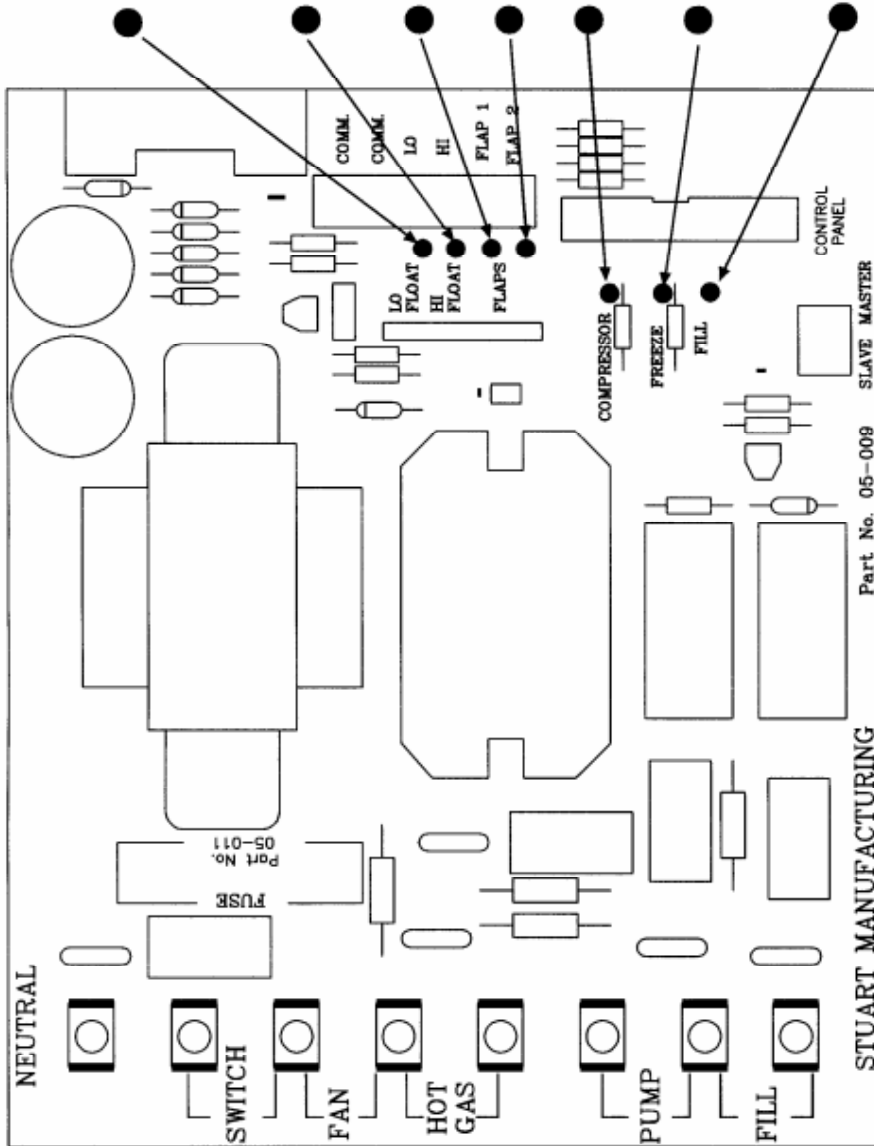

DATE	REV	REV	Page
28/9/92	1-0	1-0	1
FILE NAME	MACHINE	PCB Part No. 05-009	DF
icediag2	STUART MANUFACTURING	DRAWN BY	1
		K.S	