

# INSTALLATION INSTRUCTIONS

## LOCATION

1. All models, allow a minimum of 250mm above for correct ventilation.
2. Machine must be LEVEL.
3. Incoming water temperature affects ice production. Therefore, avoid above ground plumbing and pipes exposed to direct sunlight.
4. Make sure drain hose has no kinks and has a fall to floor waste.

## START-UP PROCEDURE

1. ENSURE MACHINE IS LEVEL
2. Connect water hose and turn on water.
3. Remove front and side panels.
4. Turn on power.
5. Wait for about 10 seconds, then press and hold RESET button for about 5 seconds. The machine should now be in normal icemaking mode. i.e. the compressor and water pump should both be running.
6. Allow machine to complete two (2) cycles before making any adjustments.

**NOTE:** On some models the top ice cubes may be slightly thinner than the bottom ice cubes. This is quite normal.